

SPARTA 44 Brushcutter



Documents

Engine

Starter assy and clutch

Tank and air filter

Transmission

Carburetor WT-870

Accessories

Illustrated parts list (Head "Load and Go" Ø130)

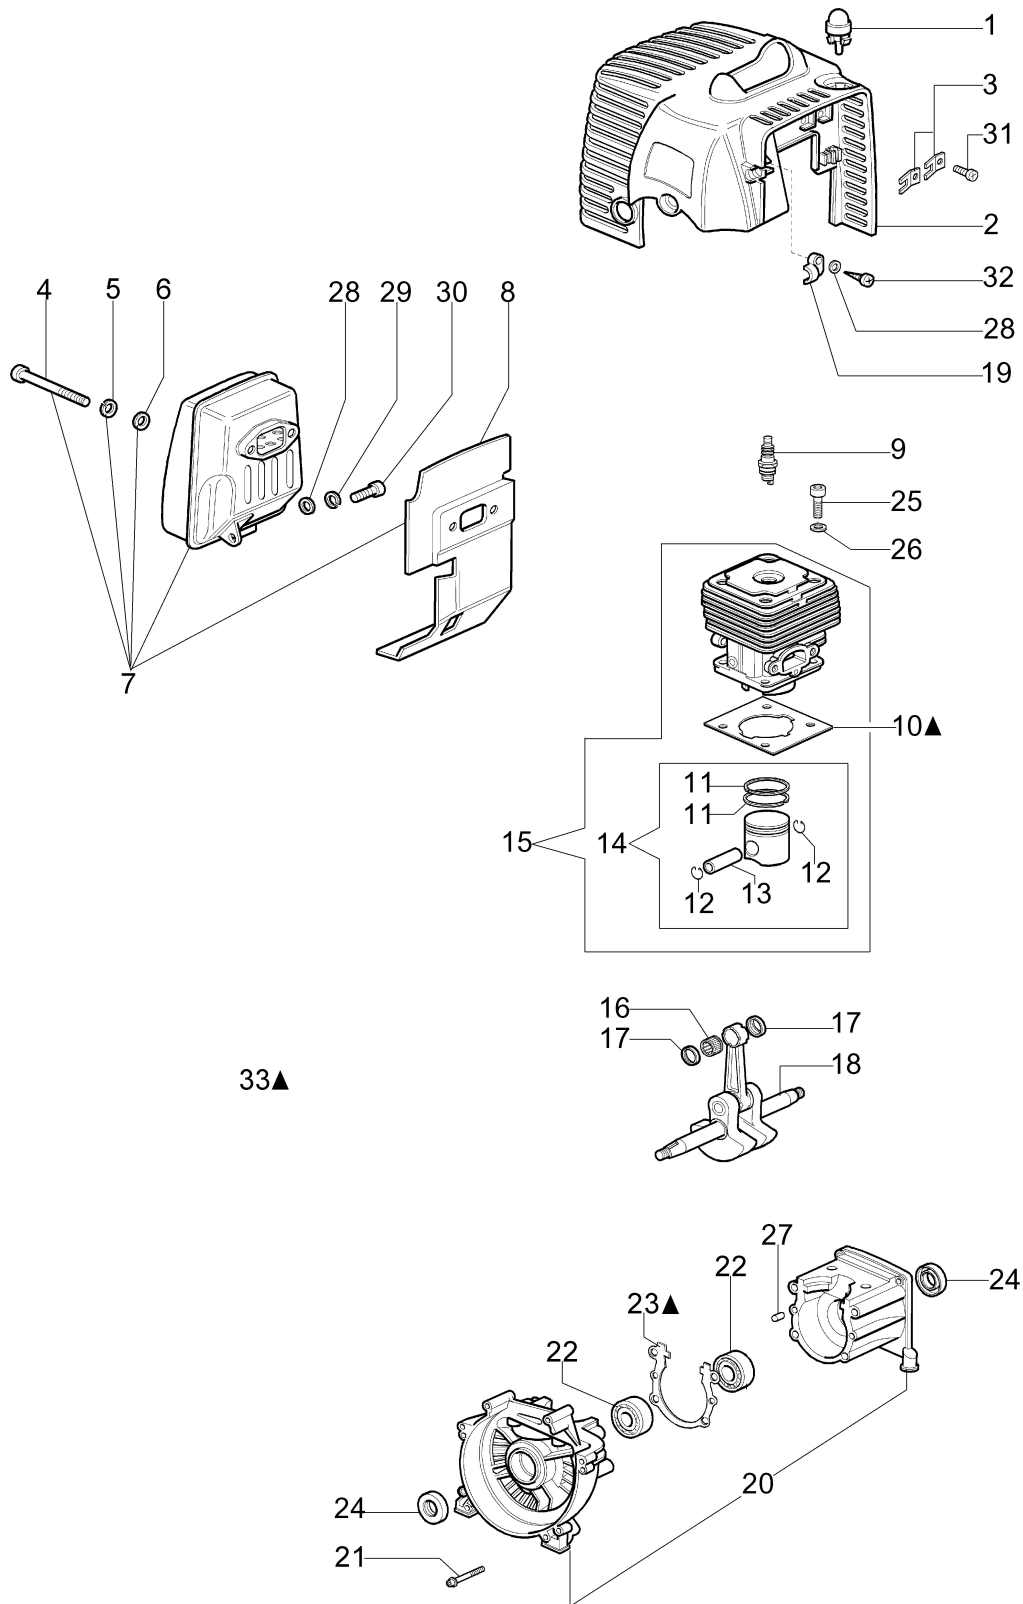


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318817R	Air purge				
2	1	61210039AR	Cylinder cover				
3	2	4191069BR	Plate				
4	2	3801069R	Screw				
5	2	3819010R	Washer				
6	1	3916006R	Washer				
7	1	61200292AR	Complete muffler				
8	1	61350271R	Deflector				
9	1	3055115	Spark plug bpmr7a				
10	1	61350272R	Gasket				
11	2	074000405R	Piston ring				
12	2	004900061R	Ring				
13	1	50110047R	Piston pin				
14	1	50120034A	Piston assy Ø40				
15	1	61330204	Complete cylinder Ø40				
16	1	50110044R	Bearing				
17	2	50110043AR	Spacer				
18	1	61200001R	Crankshaft				
19	1	61200064R	Stopper				
20	1	61350346	Crankcase assy				
21	1	3860096R	Screw				
22	2	094000006R	Bearing				
23	1	61200006AR	Gasket				
24	2	094000099R	Seal ring				
25	4	094000101R	Screw				
26	4	3833073R	Washer				
27	2	3023008R	Plug				
28	1	3916005R	Washer				
29	1	3819006R	Washer				
30	1	3801010R	Screw				
31	2	3960030R	Screw				
32	1	3960069AR	Screw				
33	1	61202038BR	Gasket set				

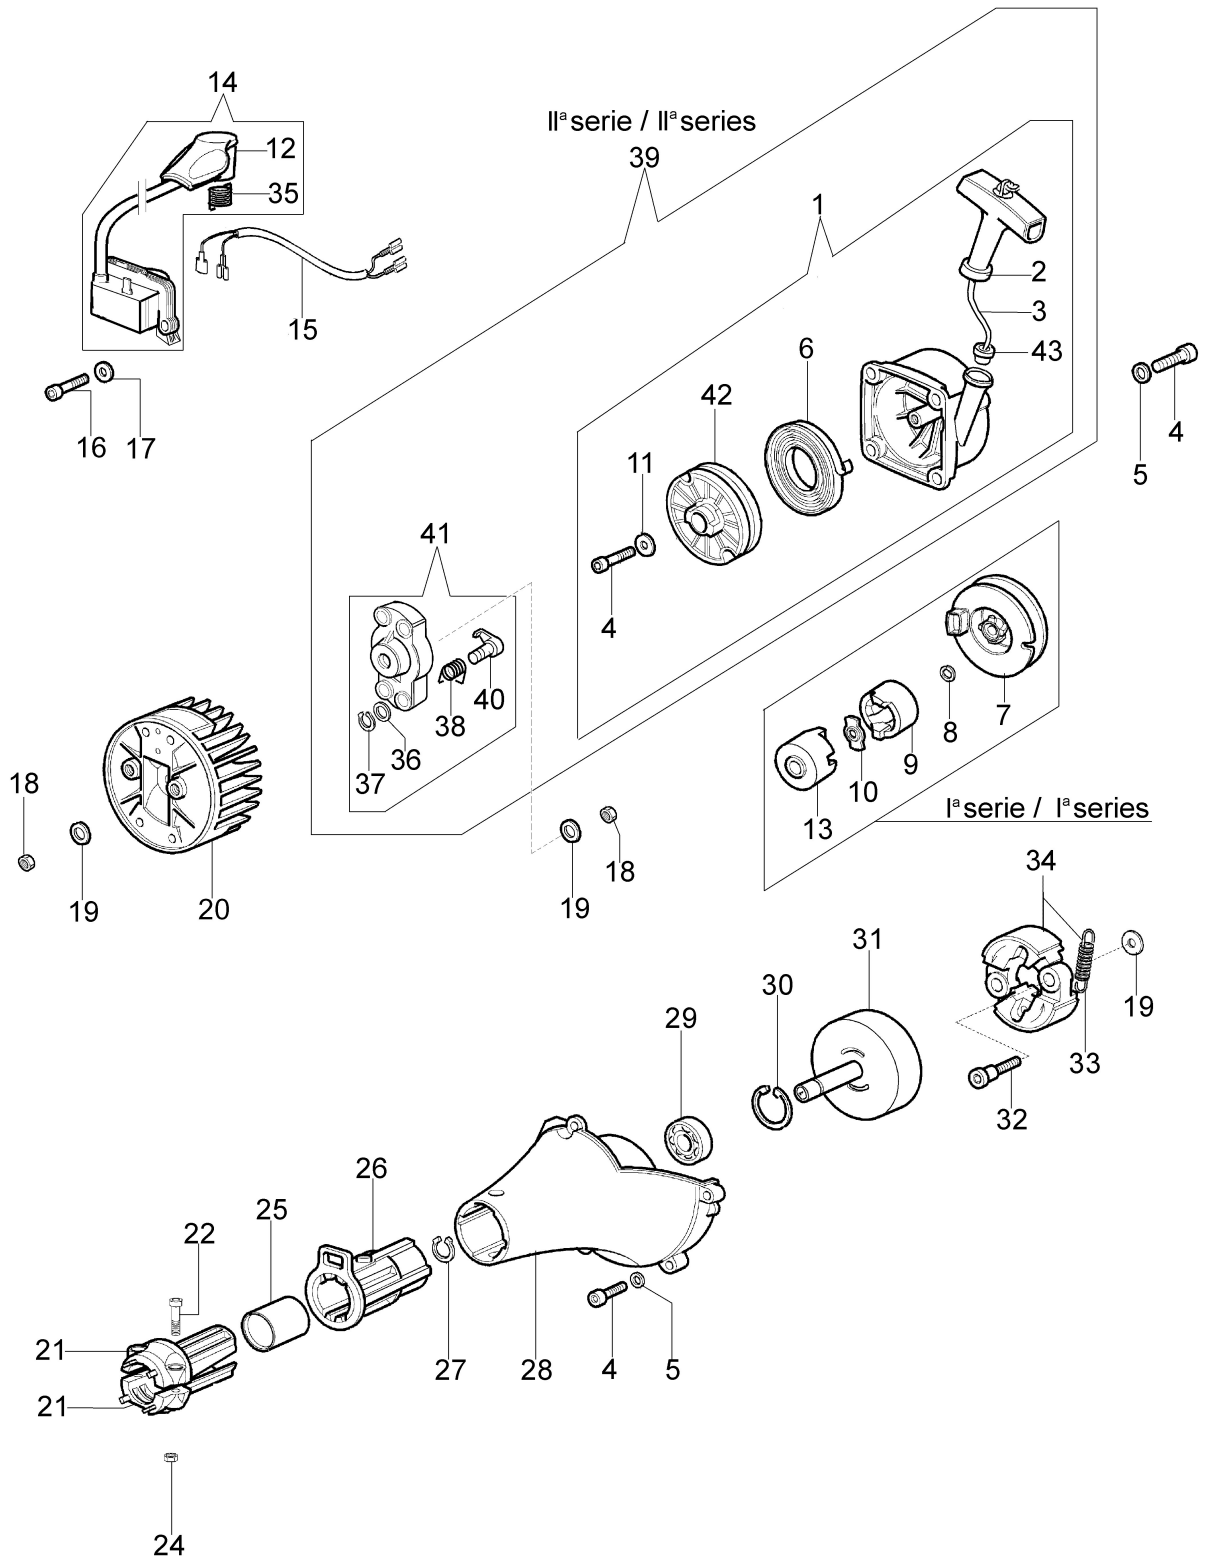


Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200259R	Starter assy				BT3-100-07/10
2	1	61200015R	Starter handle				BT3-100-07/10
3	1	56520087R	Starter rope				BT3-100-07/10
4	6	3801010R	Screw				BT3-100-07/10
5	4	3916005R	Washer				BT3-100-07/10
6	1	004000132R	Spring				BT3-100-07/10
7	1	56520038AR	Pulley				BT3-100-07/10
8	1	3027005R	Ring				BT3-100-07/10
9	1	56520039AR	Shaft joint				BT3-100-07/10
10	1	56520040AR	Plate				BT3-100-07/10
11	1	3918028R	Washer				BT3-100-07/10
12	1	61200012AR	Spark plug cap				
13	1	61200062AR	Clutch driver				BT3-100-07/10
14	1	61250015BR	Ignition coil				
15	1	61250047R	Cable				
16	2	3801013R	Screw				
17	2	3819006R	Washer				
18	1	3912009	Nut				BT3-100-07/10
19	1	3818011AR	Washer				BT3-100-07/10
20	1	61250014AR	Flywheel				BT3-100-07/10
21	2	61200192AR	Adaptor				
22	2	3801015R	Screw				
24	2	3914003R	Nut				
25	1	4196038R	Bushing				
26	1	4196037R	Sleeve				
27	1	3024015R	Ring				
28	1	61200071AR	Starter case				
29	1	3035042R	Bearing				
30	1	3025022R	Ring				
31	1	4191030R	Clutch drum				
32	1	4191027FR	Pin				
33	1	4191028R	Spring				
34	1	4191153BR	Clutch				
35	1	50050127	Spring				
35	1	50050127	Spring				
36	2	3064010R	Washer				BT3-100-07/10
37	2	3024007R	Ring				BT3-100-07/10
38	2	4191017A	Spring				BT3-100-07/10
39	1	61200261	Starter kit				BT3-100-07/10
40	2	4191016R	Pawl				BT3-100-07/10
41	1	61252002R	Clutch driver				BT3-100-07/10
42	1	4191018BR	Starter pulley				BT3-100-07/10
43	1	072700089R	Bushing				BT3-100-07/10

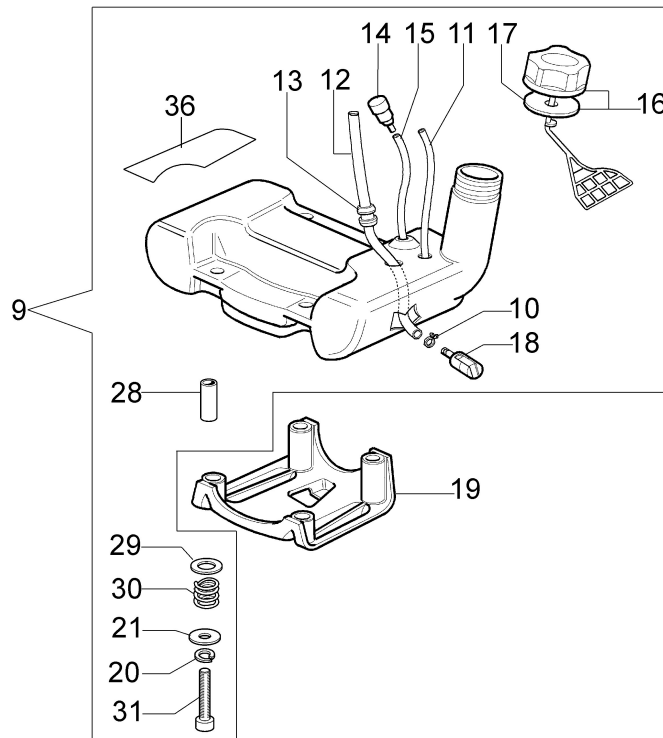
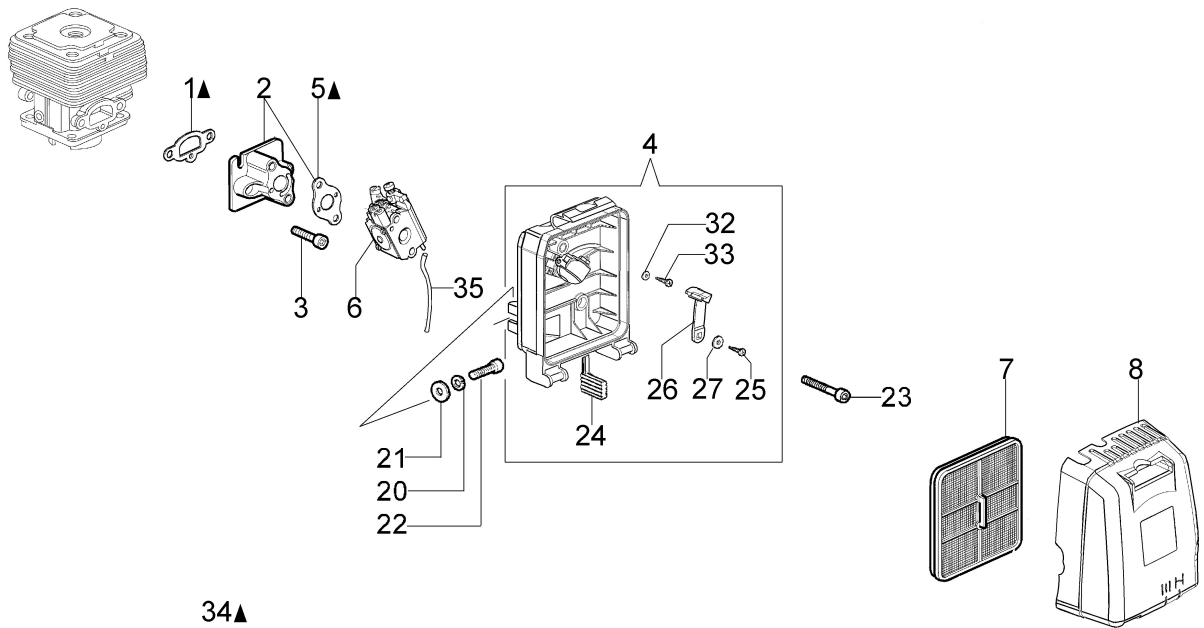


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	2	3801015R	Screw				
4	1	61202063	Complete support				BT3-104-11/10
5	1	61200196AR	Gasket				
6	1	2318735CR	Carburetor WT-870B				
7	1	61200025BR	Air filter				
8	1	61200207R	Filter cover				
9	1	61200028DR	Complete tank				
10	1	4098377R	Band				
11	1	61350328R	Tube				
12	1	3073014R	Tube				
13	1	4161211R	Bush				
14	1	61070011AR	Breather valve				
15	1	61250228R	Tube				
16	1	61070079AR	Tank cap				
17	1	61070006R	Gasket				
18	1	50010218R	Fuel filter				
19	1	61200238AR	Guard				
20	5	3819006R	Washer				
21	5	3918005R	Washer				
22	1	3801013R	Screw				
23	2	4175097	Screw				
24	1	61200024R	Lever				
25	1	3960087AR	Screw				
26	1	61200204AR	Shutter				
27	1	3918003R	Washer				
28	4	61200128R	Spacer				
29	4	3916008R	Washer				
30	1	61200129R	Spring				
31	4	3801016R	Screw				
32	2	3916022R	Washer				
33	2	3960145R	Screw				BT3-104-11/10
34	1	61202038BR	Gasket set				
35	1	61350329R	Tube				
36	1	61210047R	Guard				


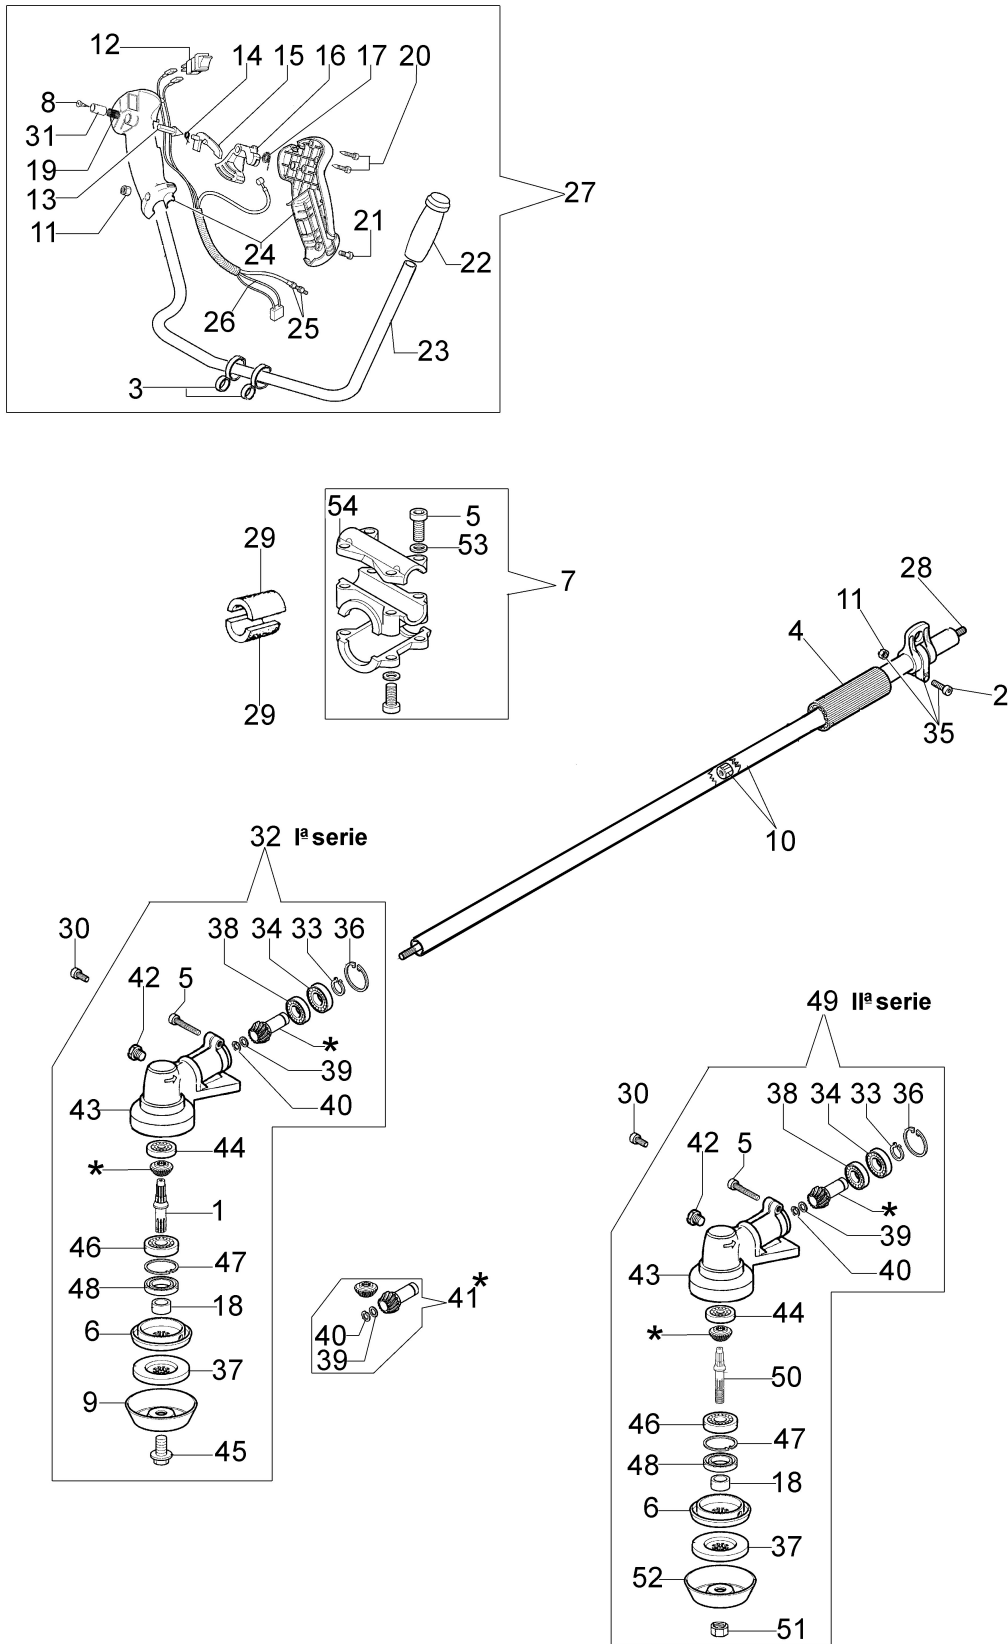


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61040106A	Pin				BT3-101-07/10
2	2	3801015R	Screw				
3	2	61170132R	Grommet				
4	1	4179094AR	Knob				
5	5	3801013R	Screw				
6	1	61040145R	Hub				
7	1	074000183AR	Clamp	06/2011			BT3-109-04/11
8	1	3960021	Screw				
9	1	4100456R	Guard				BT3-101-07/10
10	1	61252049R	Tube Ø28				
11	8	3914003R	Nut				
12	1	2317021R	Switch				
13	1	4138358R	Button				
14	1	4138360R	Spring				
15	1	4174246AR	Lever				
16	1	4174245CR	Throttle lever				
17	1	4138361R	Spring				
18	1	61040066R	Spacer				
19	1	4100098BR	Spring				
20	2	3960029	Screw				
21	1	3801016R	Screw				
22	1	61040140R	Knob				
23	1	61200049R	Handlebar				
24	1	61040131R	Handle				
25	1	61200047R	Throttle cable				
26	1	61200046R	Cable				
27	1	61200048R	Handlebar				
28	1	61202109R	Shaft				
29	2	074000035R	AV-mount				
30	1	3901008R	Screw				
31	1	4138359R	Button				
32	1	61250287A	Bevel gear Ø28				BT3-101-07/10
33	1	3024012R	Snap ring				
34	1	3035023R	Bearing				
35	1	4179194AR	Band Ø28				
36	1	3025019	Ring				
37	1	4179089R	Flange				
38	1	3034019R	Bearing				
39	1	4138311A	Ring				
40	1	3025009	Ring				
41	1	61040133A	Bevel gear set				
42	1	61040071R	Cap				
43	1	61040144R	Gear case				
44	1	3034218R	Bearing				
45	1	61040074AR	Screw				BT3-101-07/10
46	1	3034012R	Bearing				

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
47	1	3025022R	Ring				
48	1	3050018R	Seal ring				
49	1	61250287A	Bevel gear Ø28				BT3-101-07/10
50	1	61250054R	Pin				BT3-101-07/10
51	1	61110075R	Nut				BT3-101-07/10
52	1	61110074R	Guard				BT3-101-07/10
53	2	3819006R	Washer				
54	1	072700264CR	Clamp	06/2011			BT3-109-04/11

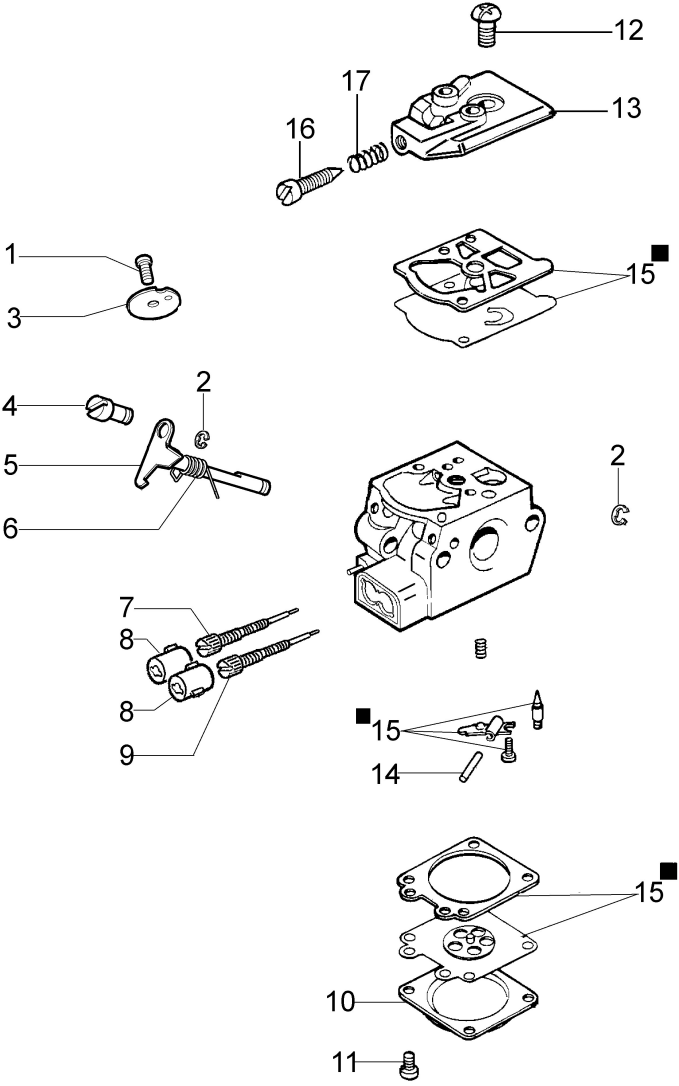

15 ■ KIT RIPARAZIONE
REPAIR KIT

Illustration Carburetor WT-870

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010141	Screw				
2	2	095000164	Ring				
3	1	095000141	Shutter				
4	1	2318211	Pin				
5	1	2318786	Shaft				
6	1	094600208	Spring				
7	1	2318736	Adjust. screw				
8	2	2318867R	Caps-lock				
9	1	2318631	Adjust. screw				
10	1	2318191	Cover				
11	4	035000162	Screw				
12	1	003300197	Screw				
13	1	50050107	Cover				
14	1	003300201	Spindle				
15	1	2318671	Repair kit				
16	1	074000240	Adjust. screw				
17	1	094600148	Spring				

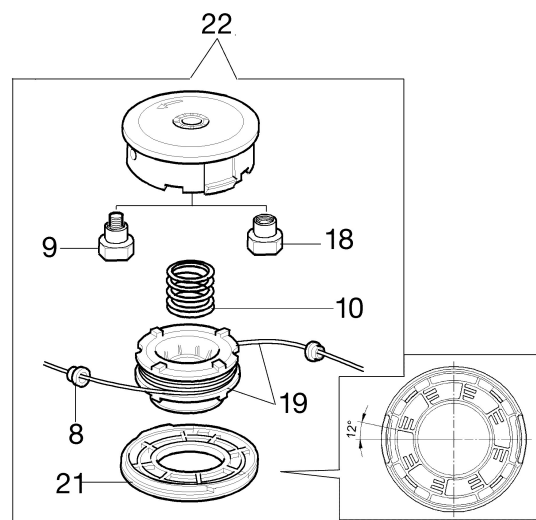
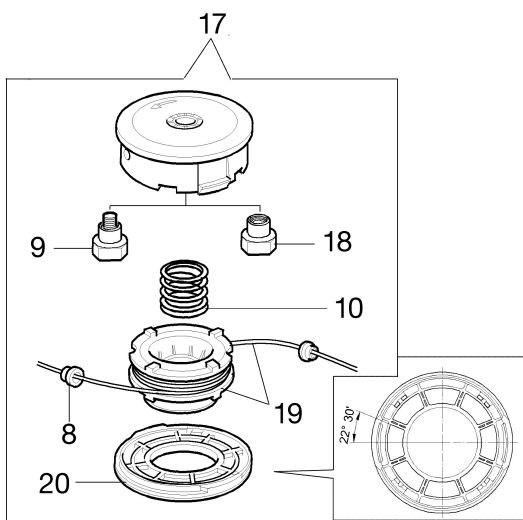
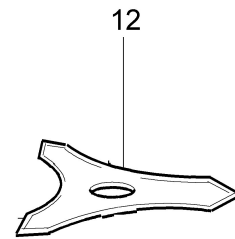
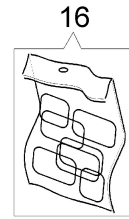
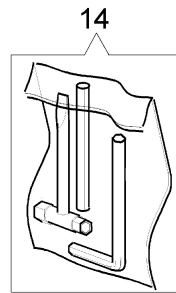
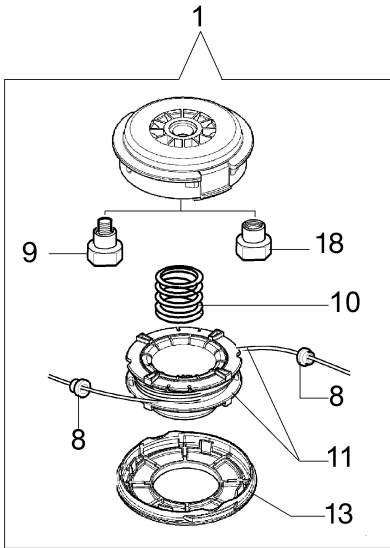
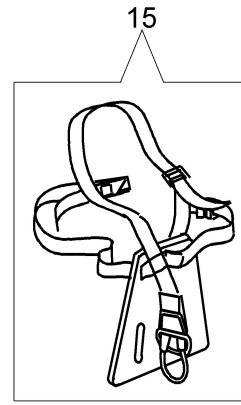
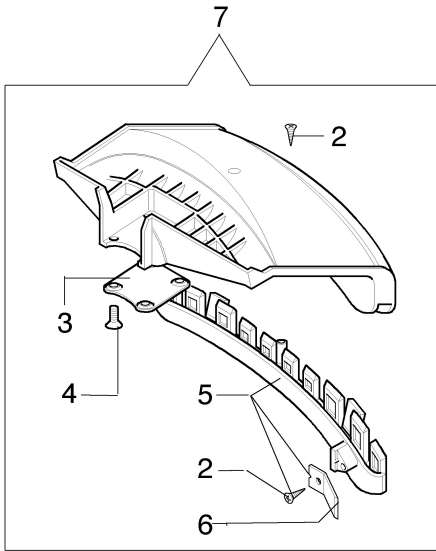


Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1		-	Not available for this product			Sostituita da testina completa codice 63019015	
2	2	3960040R	Screw			(inserto maschio), 63019017 (inserto	
3	1	4174278R	Plate				
4	4	3802004DR	Screw			complet head p/n 63019015 (male insert) 63019017	
5	1	61380126	Skirt w/blade				
6	1	4174275R	Blade				
7	1	61380125	Guard kit				
8	2	4199005AR	Bushing				
9	1	4199008B	Insert (male)				BT3-101-07/10
10	1	4199004	Spring				
11	1	4199042R	Nylon spool Ø3				
12	1	4095673BR	3-tooth blade				
13	1	4199035BR	Cover				
14	1	61052031R	Tool kit				
15	1	61200106R	Harness				
16	1	61202036	Labels kit				
17		-	Not available for this product			Sostituita da testina completa codice 63019015	
18	1	61110076	Insert (female)			(inserto maschio), 63019017 (inserto	BT3-101-07/10
19	1	63129008	Head Load&Go				BT3-101-07/10
20	1	4199026A	Cover			complet head p/n 63019015 (male insert) 63019017	
21	1	4199046	Cover				
22	1	61459102	Complete nylon head Ø 3			Inserto maschio; Male	BT3-101-07/10
22	1	61459102	Complete nylon head Ø 3			Inserto femmina; Female insert	BT3-101-07/10

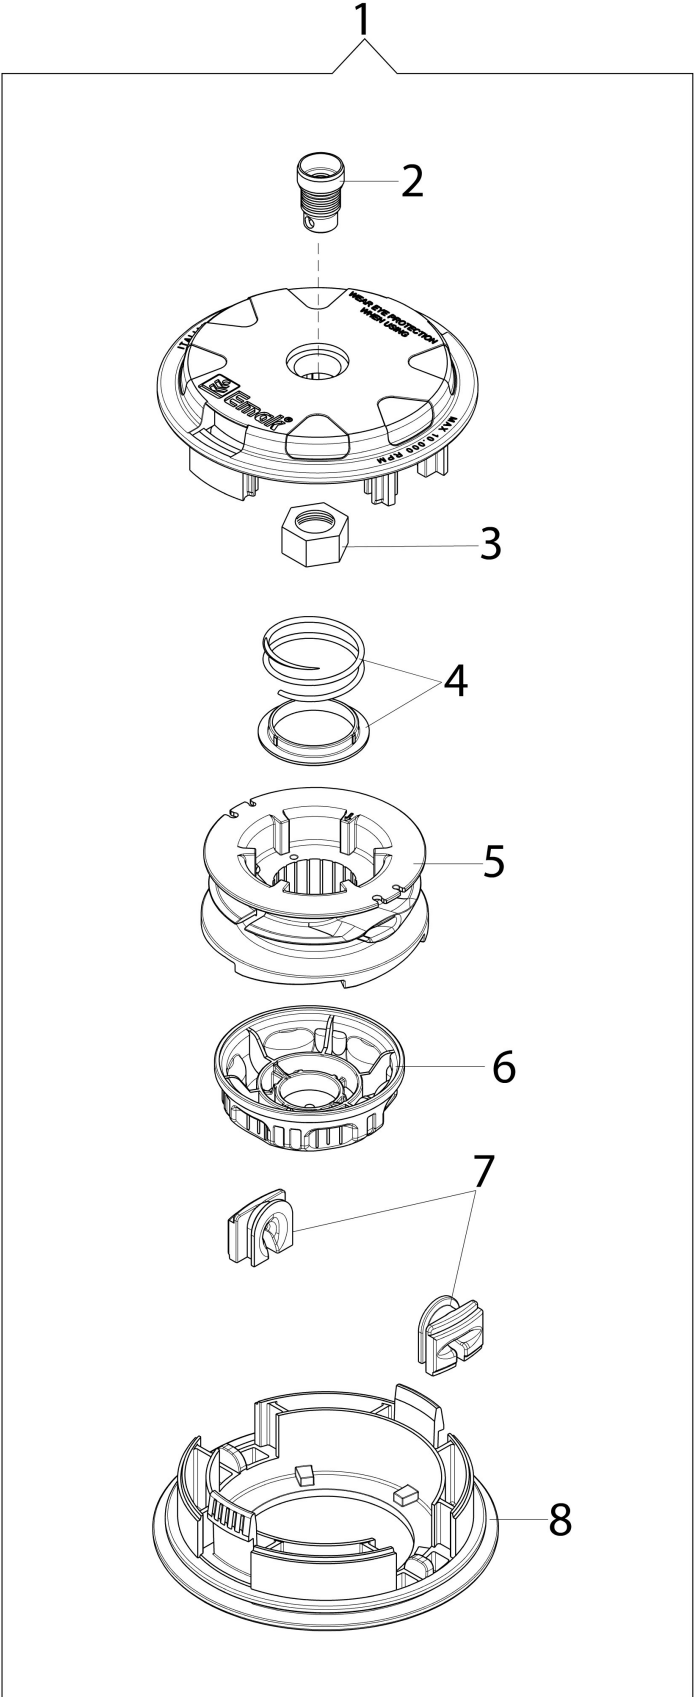


Illustration Illustrated parts list (Head "Load and Go" Ø130)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129015	Head Load&Go			ExtraLife	
1	1	63129008	Head Load&Go			Easy&LongLife	
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Ignition coil				
6	1	63120030AR	Knob			ExtraLife	
6	1	63120007AR	Knob			Easy&LongLife	
7	2	63120001R	Bushing				
8	1	63120005R	Cover				